

Wire Candy/Snack Rack Assembly Instructions

3-Level (Item # WCSR3L)




Midwest Retail Services, Inc. 800-576-7577

7670 Commerce Pl. | Plain City, Ohio 43064 info@mw-rs.com | www.midwestretailservices.com



WIRE CANDY/SNACK RACK, 3 LEVELS

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

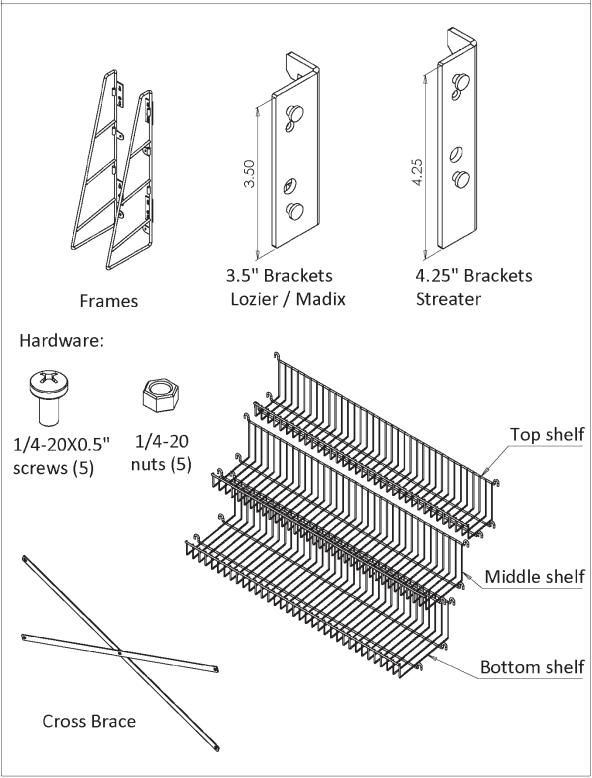




WIRE CANDY/SNACK RACK, 3 LEVELS 48"W


READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

Freestanding or wall mounted instructions:

Assembly steps:

- 1. Stand both left and right frames up vertically.
- 2. Starting at the bottom, set the shelves onto frames, inserting rear downturn hooks into cyclinder fastener on the frames.
- 3. Install cross brace along the back of the fixture, connecting to the flat plates on the rear of the frames inserting the bolts from the rear of the display.
- 4. If wall mounting, use the keyholes in the rear plate to secure with fasteners (not included). Figure 1

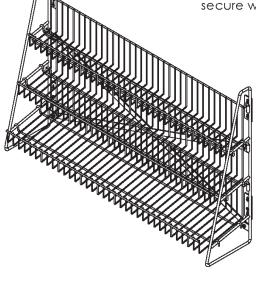

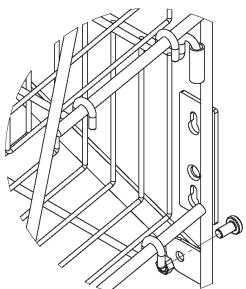

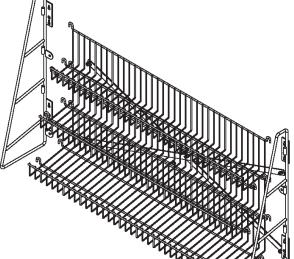


Figure 1

8	Nuts	5
7	Screws	5
5	Cross Brace	1
4	Top shelf	1
3	Middle shelf	1
2	Bottom shelf	1
1	Frames	2
Item	Name	Quantity



WIRE CANDY/SNACK RACK, 3 LEVELS 48"W

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.



Assembly steps

- 1. Stand both left and right frames up vertically.
- 2. Select the brackets appropriate for your gondola shelving unit. The 3.5" tall brackets will be used for Lozier or Madix. The taller 4.5" tall brackets will be used for Streater. Insert the brackets into the keyhole slots of the rear plates, the bracket tabs facing outward. Figure 2
- 4. Starting at the bottom, set the shelves into frames, inserting rear downturn hooks into cyclinder fastener on the frames.
- 3. Install optional cross brace along the back of the fixture, connecting to the flat plates on the rear of the frames inserting the bolts from the rear of the display.

