


Brakeline Display Assembly Instructions

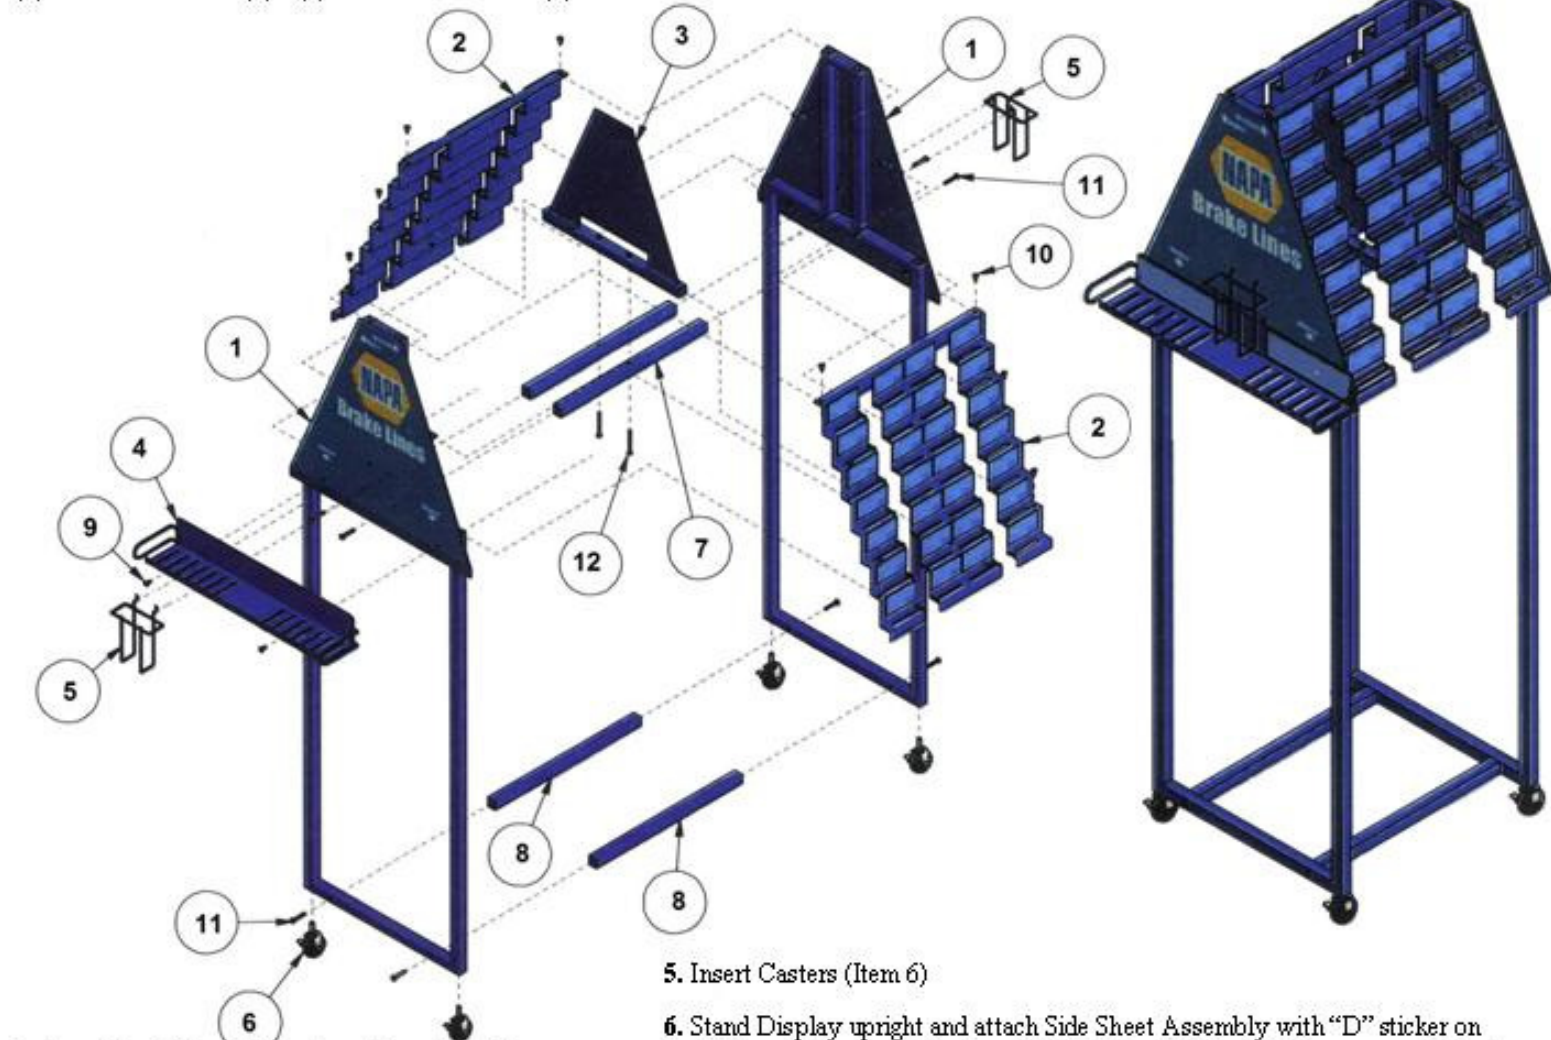

1. Attach both Upper Cross-Bars (Item 7) to Sheet Brace (Item 3) using (2) 2-1/2" Screws (Item 12)

2. Attach both Cross-Bars (Item 8) to (1) Side Panel (Item 1) using (2) 1-1/2" Screws (Item 11)

3. Attach Upper Cross-Bar Assembly from Step 1 to Side Panel Assembly from Step 2 using (2) 1-1/2" Screws (Item 11)

4. Attach (1) Side Panel (Item 1) to Side Panel Assembly from Step 3 using (2) 1-1/2" Screws (Item 11)

5. Insert Casters (Item 6)

6. Stand Display upright and attach Side Sheet Assembly with "D" sticker on back (Item 2) to side of display with Side Panels "Domestic" arrows pointing to that side using (6) 1/2" Screws (Item 10)

7. Attach Side Sheet Assembly with "I" sticker on back (Item 2) to side of display with Side Panel "Imported" arrows pointing to that side using (6) 1/2" Screws (Item 10)

8. Attach Shelf Adaptor either Side Panel (Item 1) using (2) Flat Countersunk Screws (Item 9)

9. Insert (1) Brochure Holder to each Side Panel (Item 1)