## BSSIL - STRAIGHT IN LOCKING BASE SHOE

PAGE 1 OF 1 ASY1-075

INSTALLATION INSTRUCTIONS




Insert the base shoe into the upright. Engage the latch by pushing it into the slot of the upright. The latch must be completely engaged in the slot before installing the base shelves!

## NOTE!

SHELVING SYSTEM MAY COLLAPSE IF THE BASE SHOE IS NOT PROPERLY INSTALLED AND THE LATCH IS NOT PROPERLY ENGAGED!

SEE WARNING LABEL ON BASE SHOE!

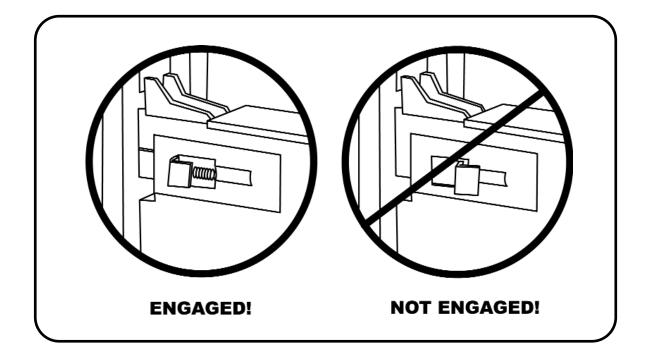



P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349

STORE FIXTURES P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 256.839.6354 / 800.633.6282

	REV
--	-----

REV#	ECN#	REVISION	BY	DATE	REV#	ECN#	REVISION	BY	DATE