


Form No. 08333-0429 Page1 R2-9-03

## ANCHORING AND LEVELING

Start leveling from the high point on the floor and go out each way. Run must be level both vertically and horizontally.

Make sure wallcase is level and plum before anchoring to the wall.

Attach all units to the wall with standard tie bracket 10"-12" from the top of the standard

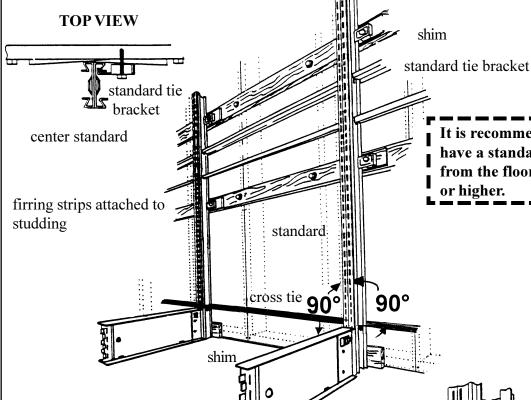

It is recommended to have a standard tie bracket 30"-36" from the floor when the standard is 108' on higher

Irregular walls and floors may make it necessary to shim beneath bottom arms and behind standards. After shimming, make sure bottom arms are square with standard and crosstie. standard

standard tie
bracket

Nails are not acceptable as fasteners for anchoring standards.

Build remainder of wallcase in the same manner as gondola is assembled. (see pages 5-12)