


SLATWALL BACK PANEL ASSEMBLY

Full drawing


PART IDENTIFICATION

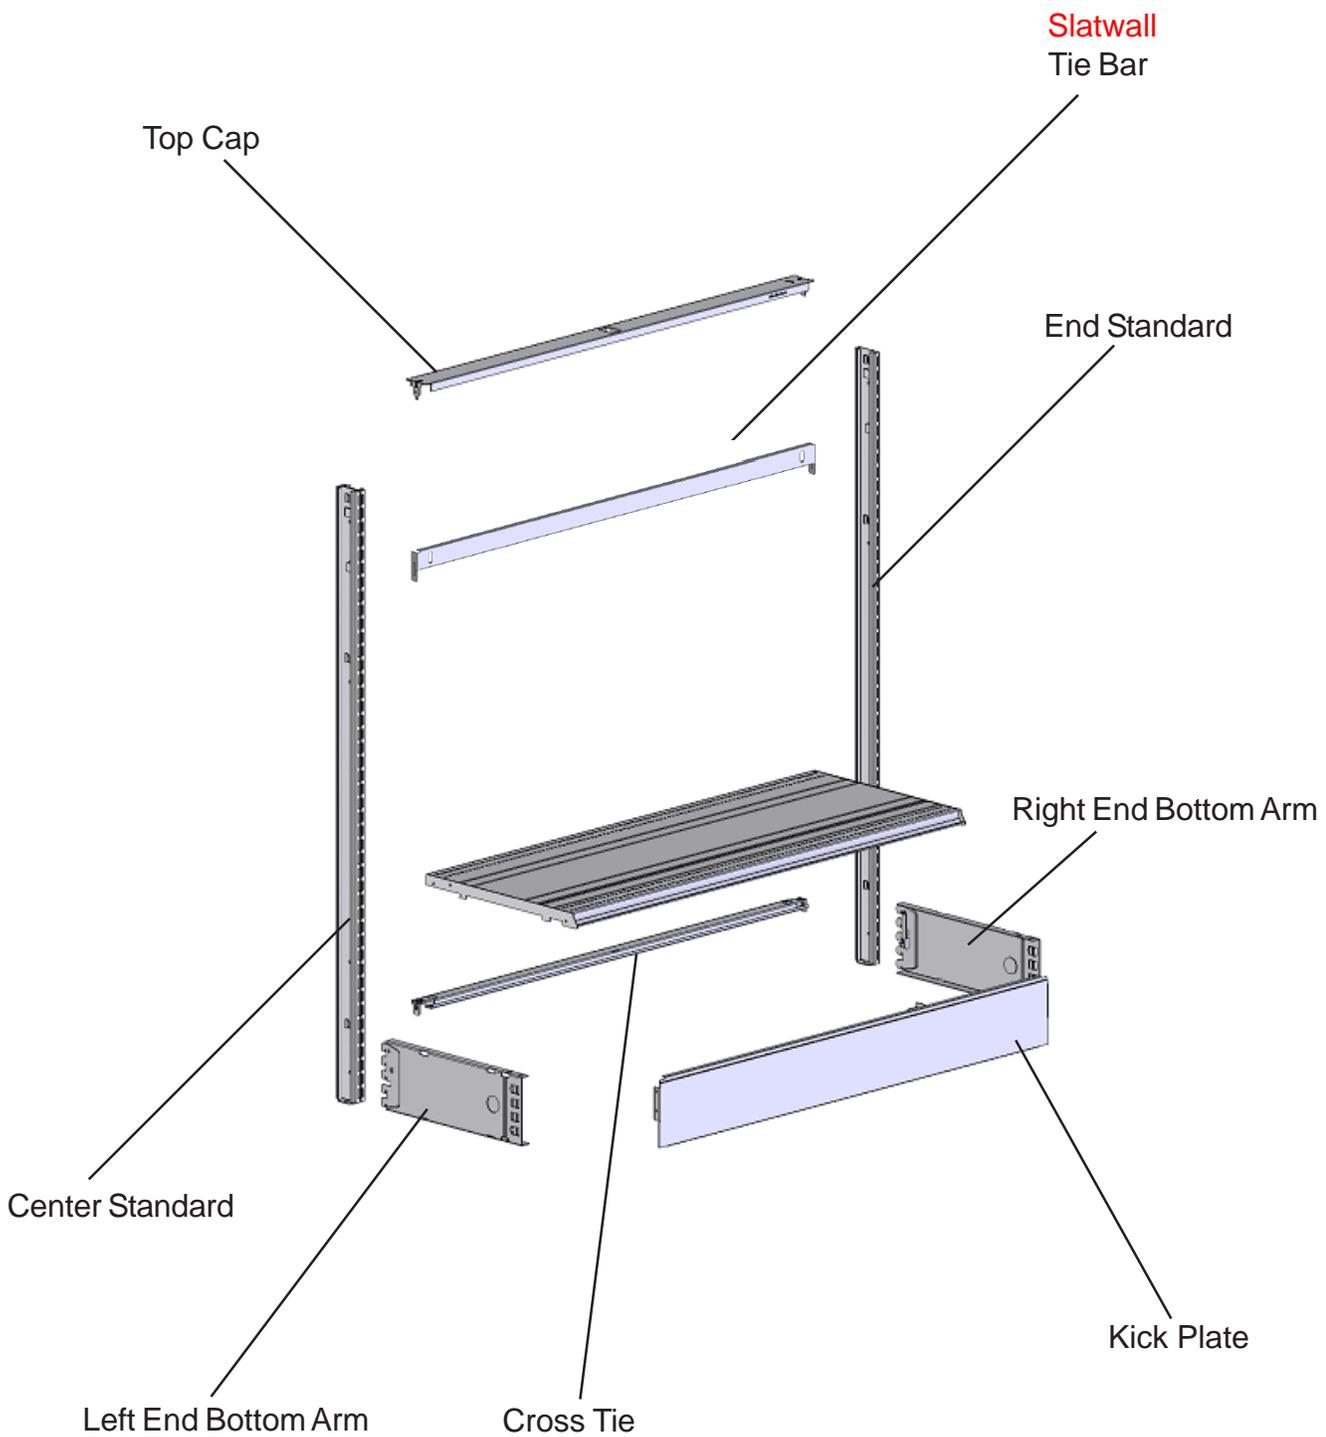


BATTERIES PLUS NOTE:

Bottom Arm Ends are Black and Embossed with 14L or 14R
Center Arms will be grey or beige in color


PART IDENTIFICATION

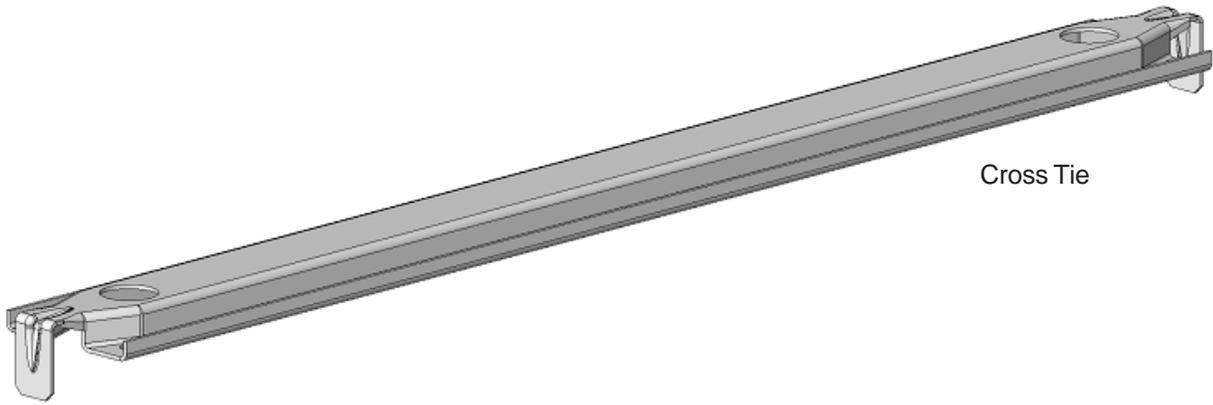

Cross Tie

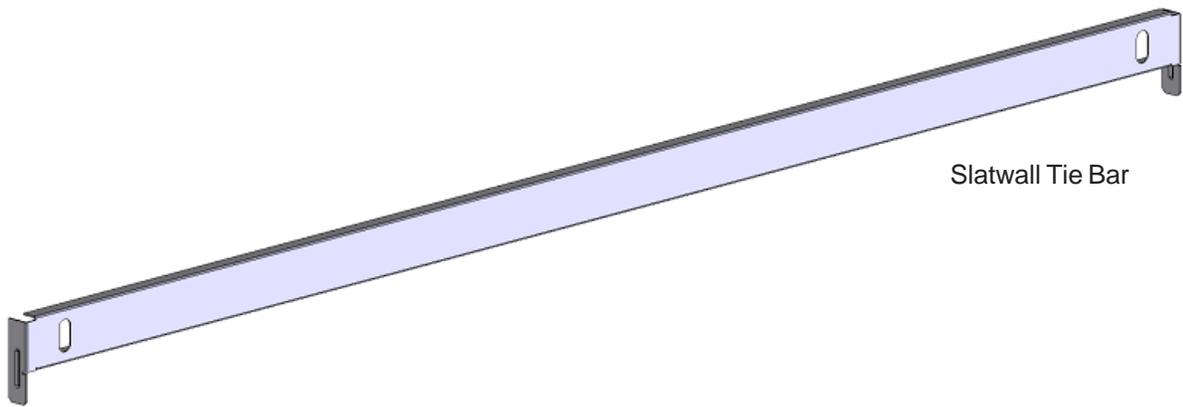


Slatwall Tie Bar

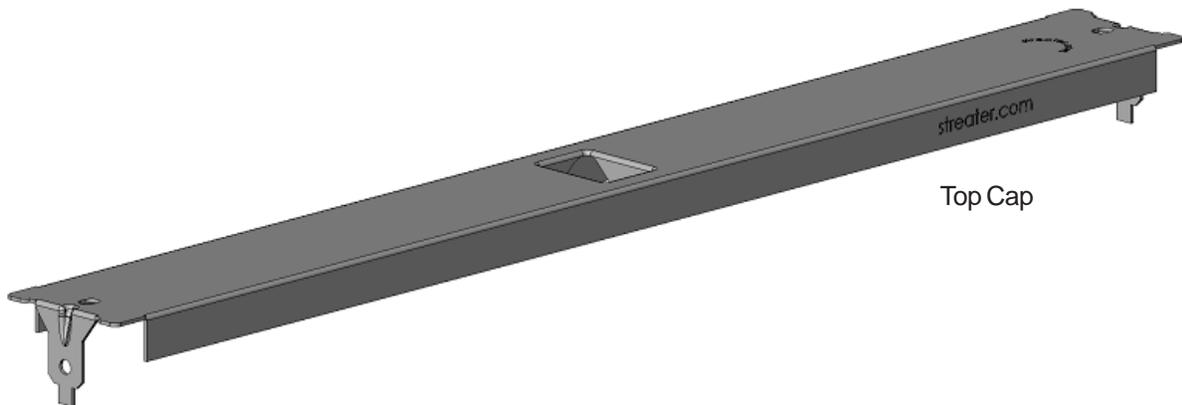

Top Cap

1

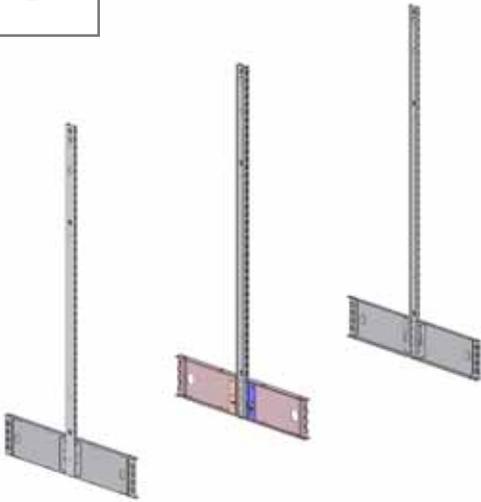


With the left upright (smooth side out) in hand, take the left hand bottom arm (smooth side out) then slide it into the upright and push down to seat the hooks.


To lock the bottom arm into place use a mallet and tap the locking key into the corresponding slot in the upright.

Repeat step with right side components.


Unlocked

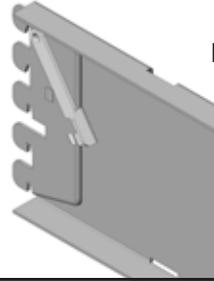

Locked

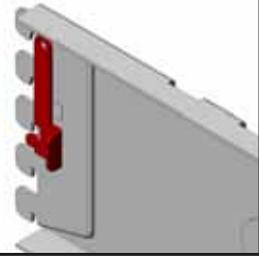


2

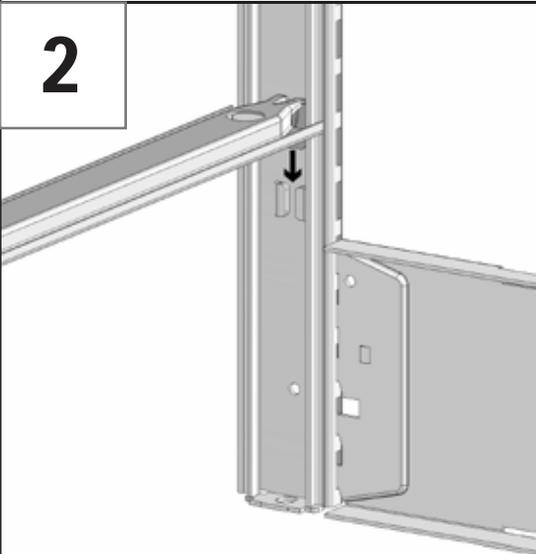


Slide the cross tie into place on one upright and then the other as pictured to the left.

Note: With your mallet tap the cross tie directly over the tab to properly seat it.

BATTERIES PLUS NOTE: Bottom Arm Ends are Black and Embossed with 14L or 14R
Center Arms will be grey or beige in color

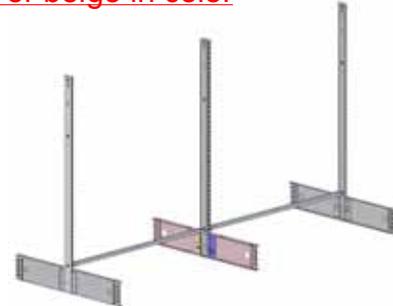


SW1

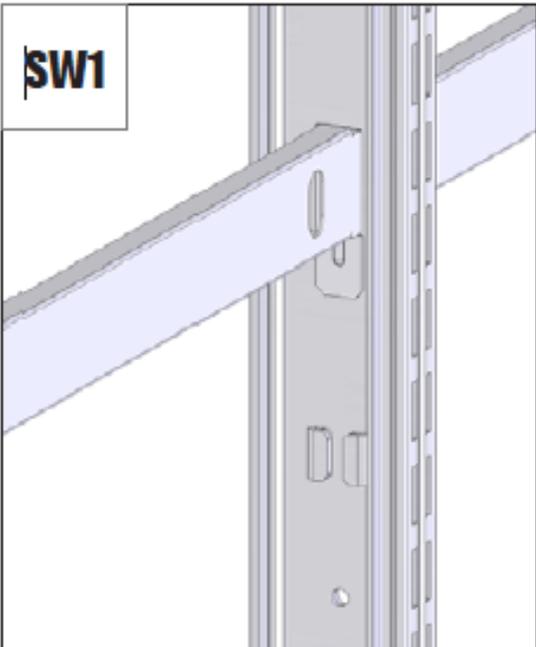

Install the slatwall tie bar by sliding it into place as pictured to the left. You may need to tap the slatwall tiebar to properly secure it.


Note: With your mallet tap the slatwall tie bar directly over the tab to properly seat it.

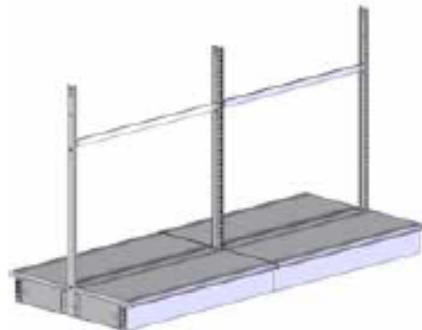


3

ULTRA 25K GONDOLA ASSEMBLY
Bottom arms, cross tie, tie bar

SW2

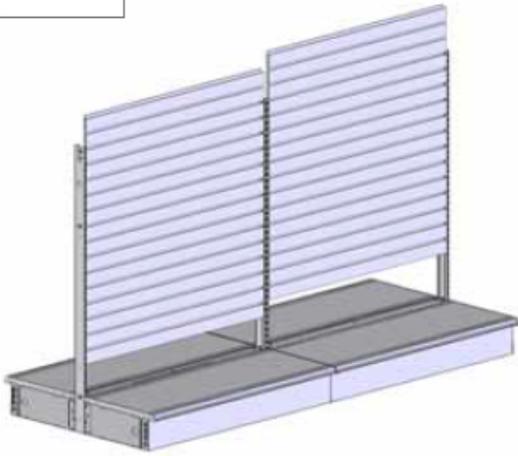


Install the slatwall back panel by inserting it into the channels slightly above the tie bar and slide it down the channels on the uprights as shown to the left. When installed the slatwall back panel should rest in or on the cross tie channel as shown below.

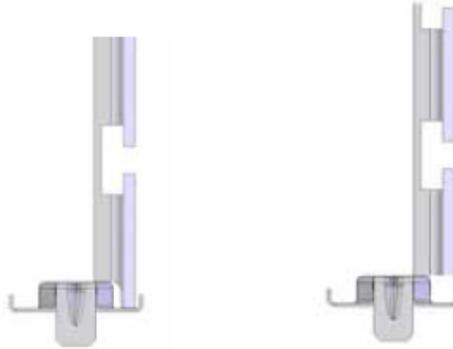

Inserts into cross tie

Sits on top of cross tie


SW3

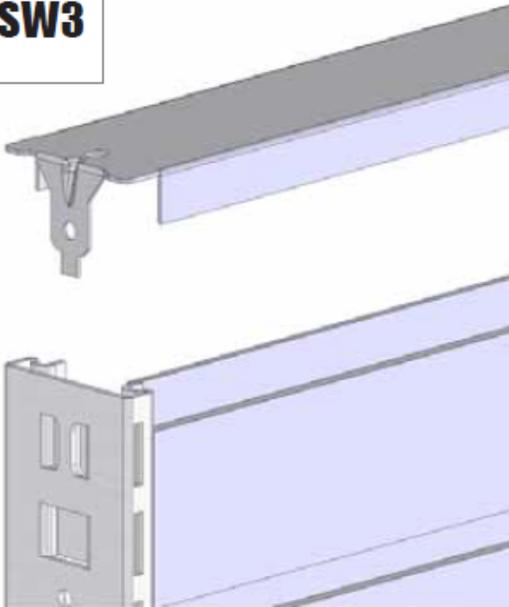


Slide the top cap over the slatwall back panels and tap with your hand to seat it. When seated the topcap should be flush across the top.

BATTERIES PLUS NOTE:



Slatwall panels for the floor gondola will have vinyl inserts instead of aluminum.

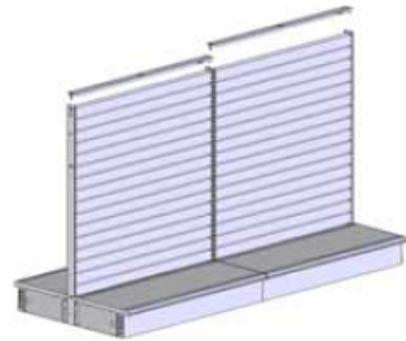

6

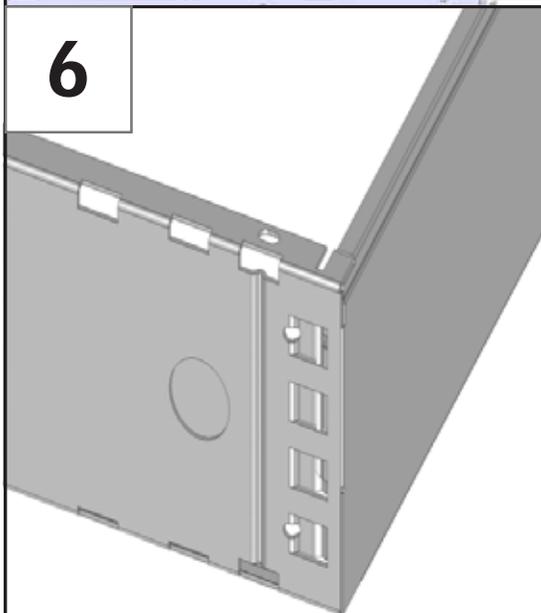


Align the kick plate tabs with the fingers of the bottom arms. Tap kick plate with your hand or a mallet to seat the tabs securely in the fingers of the bottom arm. Repeat step for opposite side.

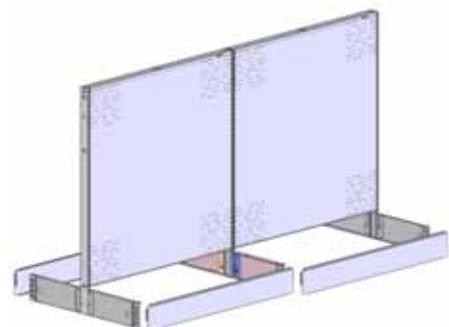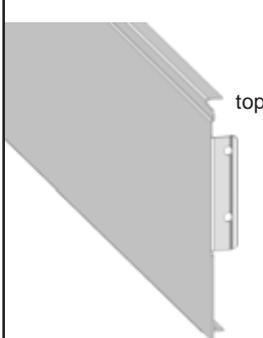


4

ULTRA 25K GONDOLA ASSEMBLY
Back Panels, top cap, kick plate

7

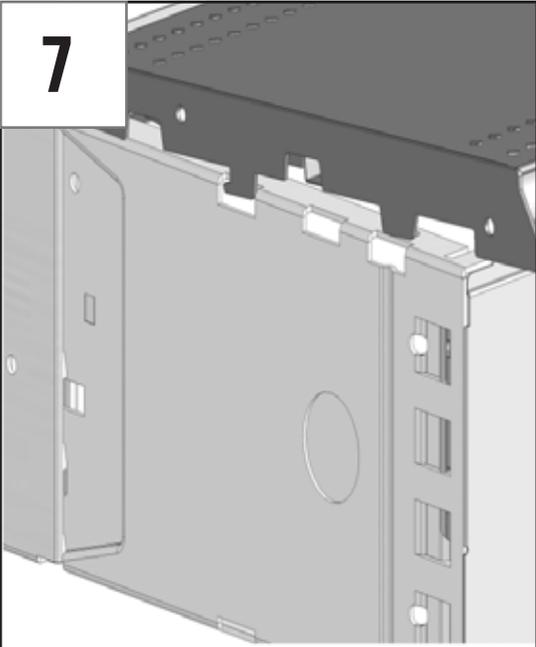

Tip the deck up slightly and slide it into the slots on the bottom arms. When installed correctly the deck should not tip forward when you push on the front of the deck. Repeat this step for opposite side.

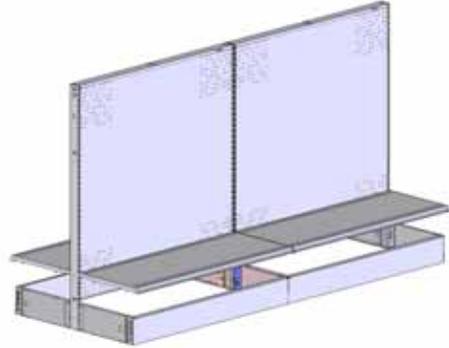


8

WALLCASE AND GONDOLA MUST BE LEVEL!



Start leveling from the high point on the floor and go out each way. Run must be level both vertically and horizontally.

STABILITY OF FIXTURE WITH LEVELERS DEMANDS THAT LEVELERS BE ADJUSTED OUT NO FURTHER THAN 1-1/2".

WRONG

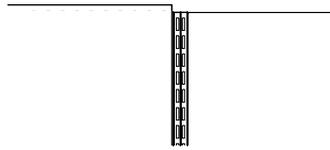

UNIT LEVEL

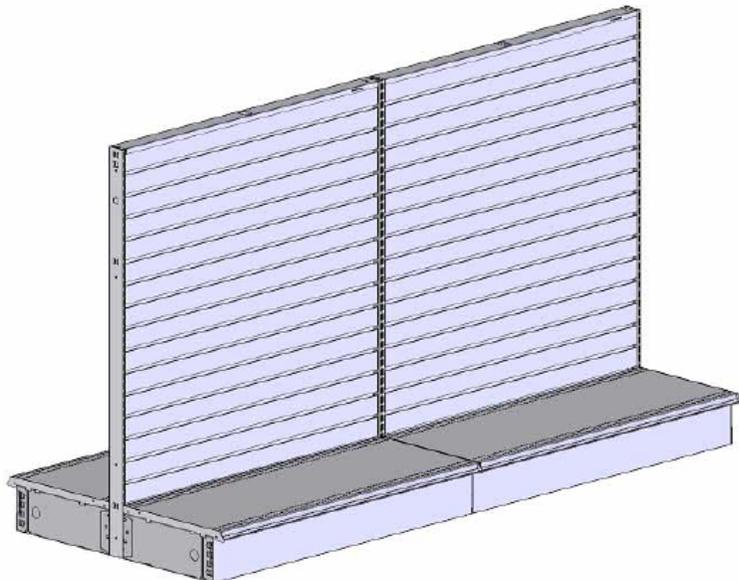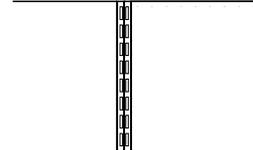

5

ULTRA 25K GONDOLA ASSEMBLY
Decks